


<b>NCF 014</b>	<b>Move Absolute with Interrupt Feeding (REAL)</b> <b>_NCF014_MoveAbsolute3_REAL</b>
--------------------	---

<b>Basic function</b>	Executes Interrupt Feeding with Move Absolute command.
-----------------------	--

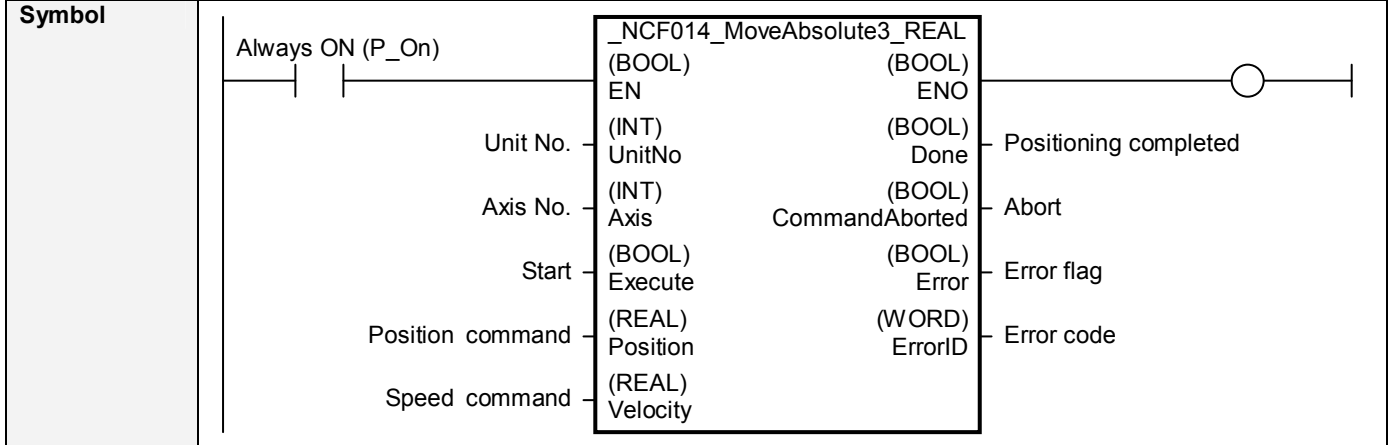


<b>File name</b>	Lib\FBL\omronlib\PositionController\NCF\_NCF014_MoveAbsolute3_REAL10.cxf
------------------	--


<b>Applicable models</b>	Position Control Unit	CJ1W-NCF71, CS1W-NCF71
	CPU Unit	CS1*-CPU**H Unit Version 3.0 or later CJ1*-CPU**H Unit Version 3.0 or later CJ1M-CPU** Unit Version 3.0 or later CP1H
	CX-Programmer	Version 5.0 or later

<b>Languages in function block definitions</b>	Ladder programming
--	--------------------



<b>Conditions for usage</b>	<p>The following conditions for usage should be the Position Control Unit version 1.2 or earlier. (It will not be required in the Position Control Unit version 1.3 or later)</p> <p>■CX-Programmer Setting</p> <p>The function blocks related to the Position Control Units will not operate if the area H512 or higher (default setting) is specified as the Non Retain Area through the Function block memory allocation. Make sure to change the memory area to unused area (DM or EM, for example) from the CX-Programmer. To change this value, click <b>PLC/Function Block Memory/Function Block Memory Allocation</b> from the Menu Bar.</p>
-----------------------------	--

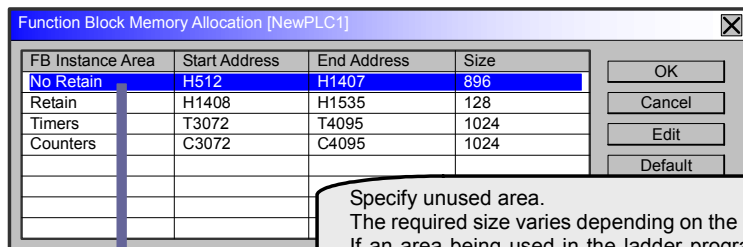

Specify unused area.  
The required size varies depending on the used FB and the number of FBs. If an area being used in the ladder program is specified or sufficient free space cannot be found, the CX-Programmer will display a compile error.

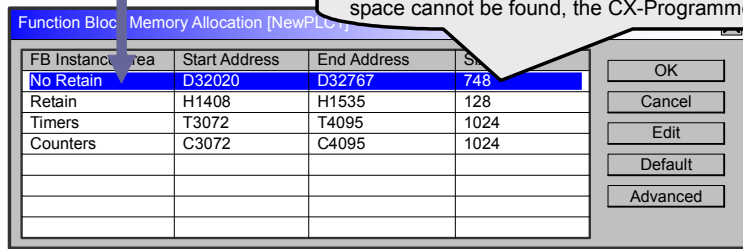

For example, to use the memory area from D32020 to D32767 (748 words), specify the addresses as shown in the left.
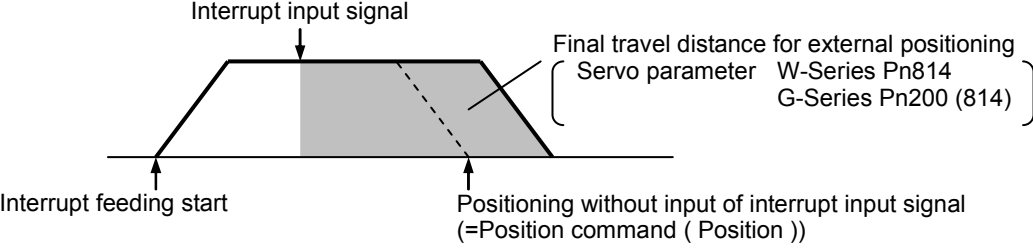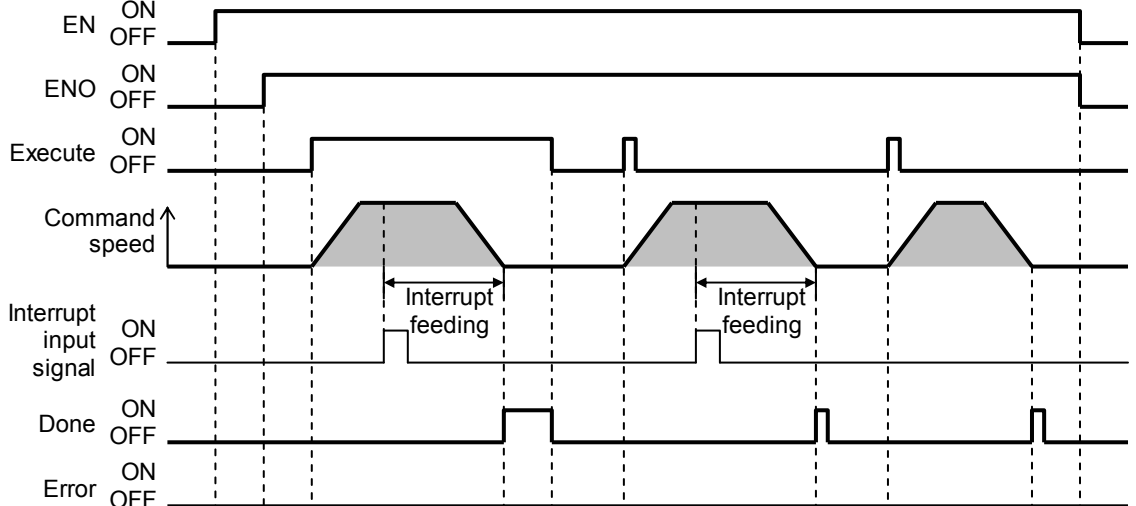
<p><b>Function description</b></p>	<p>When the Start (Execute) turns ON, the Interrupt Feeding (Move Absolute) for the axis of the specified Unit No. (UnitNo) and Axis No. (Axis) is started using the specified Position command (Position) and Speed command (Velocity). (An Interrupt Feeding Designation Bit of the Axis Operating Output Memory Area is turned ON in the FB, so it does not need to be turned ON at the external ladder program.)          Changing the Speed command (Velocity) during positioning by this FB will change the actual operation speed. Positioning is executed on the axis being positioned for an amount specified in the Servo Parameter, "Final travel distance for external positioning", when the external interrupt input signal is input. When an interrupt input signal is not input, an axis is moved to the position specified in "Position command (Position)".</p>  <p>The Positioning completed (Done) is turned ON when the positioning operation for the FB has been completed. This Flag is also turned ON when the positioning operation is completed without the interrupt feeding signal input. This flag will not be turned ON if the positioning operation is canceled because another operation has been started from a different instance, for a deceleration stop, or because an error has occurred.</p> <p>The Error flag (Error) will be turned ON and the Error code (ErrorID) will be output if an error occurs for the FB. This will not occur for error in other FBs or other instances of the FB.</p> <p>These statuses (Done/CommandAborted/Error/ErrorID) will be reset when the Start (Execute) turns OFF. If the Start (Execute) turns OFF before the positioning operation has been completed, the status will be set for at least one cycle when corresponding conditions have occurred.</p> 
<p><b>Kind of FB definition</b></p>	<p>Always execution type.          Connect the EN input to the Always ON Flag (P_On).          The same instance cannot be used in two or more places.</p>
<p><b>FB precautions</b></p>	<ul style="list-style-type: none"> <li>• Executing this FB during the positioning operation will cause a multistart error.</li> <li>• Positioning operation will be performed to the absolute position specified in Position command (Position) from the point at which the last execution was started when executing this FB during the Speed Control or Torque Control. Refer to the <i>Related Manuals</i> for details.</li> <li>• The setting of Axis Parameters and Servo Parameters is required for executing the Interrupt Feeding operation. Refer to 9-5 Interrupt Feeding of the Operation Manual, W426-E1, in the <i>Related Manuals</i> for details.</li> </ul>
<p><b>EN input condition</b></p>	<ul style="list-style-type: none"> <li>• Connect the EN input to the Always ON Flag (P_On).</li> <li>• If another bit is connected to EN, the FB outputs will be held when the connected bit turns OFF.</li> </ul>



## ■Variable Tables

### Input Variables

Name	Variable name	Data type	Default	Range	Description
EN	EN	BOOL			1 (ON): FB started 0 (OFF): FB not started
Unit No.	UnitNo	INT	&0	&0 to &15	Specify the unit number.
Axis No.	Axis	INT	&1	&1 to &16	Specify the axis number.
Start	Execute	BOOL	0(OFF)		↑ : Starts the absolute move.
Position command	Position	REAL	+0.0	-2.147483e+009 to +2.147483e+009	Specify the target position. Unit: Command units
Speed command	Velocity	REAL	+0.0	+0.0 to +2.147483e+009	Specify the target speed. Unit: Command units/s Changing the value while this FB is in operation will change the actual operating speed.

### Output Variables

Name	Variable name	Data type	Range	Description
ENO	ENO	BOOL		1 (ON): FB operating normally 0 (OFF): FB not operating normally <ul style="list-style-type: none"> <li>• FB not started</li> <li>• Input variable out of the range</li> <li>• FB ended with error</li> <li>• Common Parameters could not be read</li> </ul>
Positioning completed	Done	BOOL		Turns ON when the positioning operation has been completed.
Abort	CommandAborted	BOOL		1 (ON): Aborted It will be aborted when any of the following conditions is met during operation <ul style="list-style-type: none"> <li>• Turns ON when the other Move command done (Duplicate Move).</li> <li>• Stopped with Declaration Stop or Emergency Stop.</li> <li>• Executed Servo Unlock, Deviation Counter Reset on an operating axis.</li> <li>• Attempted to execute FB while Servo Unlock, Deceleration Stop, Emergency Stop or Deviation Counter Reset Bit is ON.</li> <li>• Detected the Stop Execution Flag is ON.</li> <li>• The Absolute Movement Bit is changed by the other FB during Absolute Movement in operation.</li> </ul>
Error flag	Error	BOOL		Turns ON when an error has occurred in the FB.
Error code	ErrorID	WORD		Returns the error code when an error has occurred in the FB. Refer to the <i>Related Manuals</i> for details on errors. A code of #0000 will be returned if any of the following conditions is satisfied. <ul style="list-style-type: none"> <li>• Input variable is out of range.</li> <li>• The common parameters of the Position Control Units are out of range.</li> <li>• Not established communications with a specified axis.</li> </ul>

### ■Version History

Version	Date	Contents
1.00	2005.07.	Original production

### ■Note

This document explains the function of the function block.

It does not provide information of restrictions on the use of Units and Components or combination of them. For actual applications, make sure to read the operation manuals of the applicable products.