


NCF 015B	Move Absolute with Interrupt Feeding (DINT) _NCF015B_MoveAbsolute3_DINT
---------------------	--

Basic function	Executes Interrupt Feeding with Move Absolute command. (Acceleration/Deceleration time setting attachment)
-----------------------	--

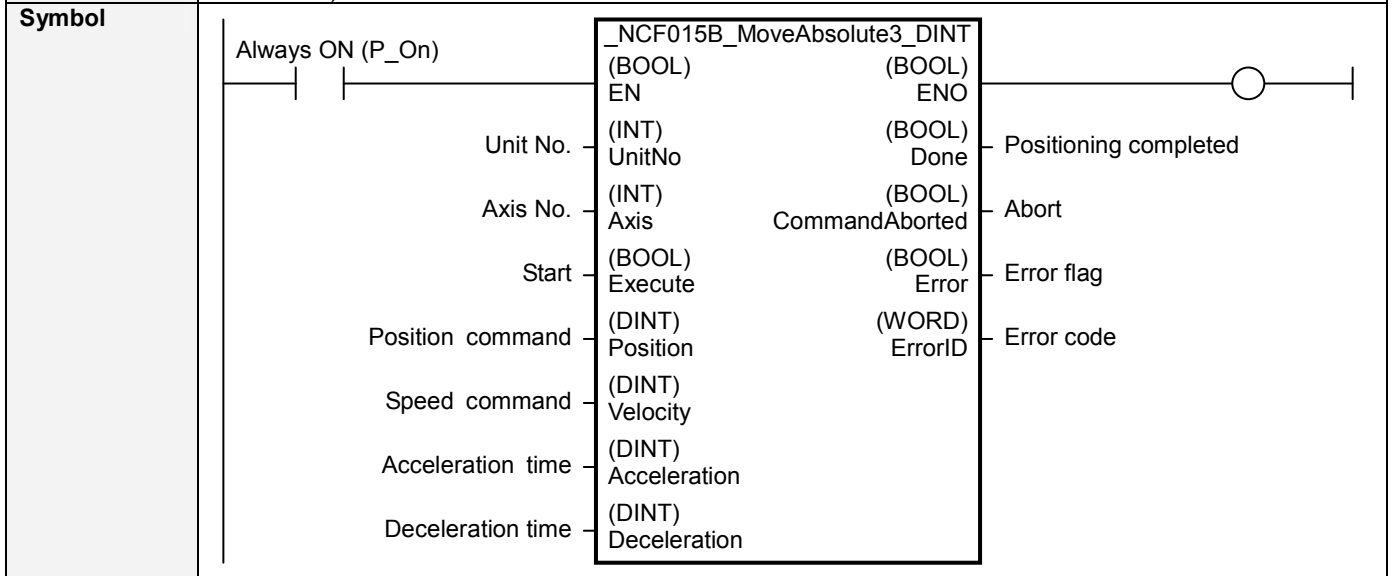


File name	Lib\FBL\omronlib\PositionController\NCF_NCF015B_MoveAbsolute3_DINT10.cxf
------------------	---


Applicable models	Position Control Unit	CJ1W-NCF71, CS1W-NCF71
	CPU Unit	CS1*-CPU**H Unit Version 3.0 or later CJ1*-CPU**H Unit Version 3.0 or later CJ1M-CPU** Unit Version 3.0 or later CP1H
	CX-Programmer	Version 5.0 or later

Languages in function block definitions	Ladder programming
--	--------------------



Conditions for usage	<p>The following conditions for usage should be the Position Control Unit version 1.2 or earlier. (It will not be required in the Position Control Unit version 1.3 or later)</p> <p>■CX-Programmer Setting</p> <p>The function blocks related to the Position Control Units will not operate if the area H512 or higher (default setting) is specified as the Non Retain Area through the Function block memory allocation. Make sure to change the memory area to unused area (DM or EM, for example) from the CX-Programmer. To change this value, click PLC/Function Block Memory/Function Block Memory Allocation from the Menu Bar.</p>
-----------------------------	--

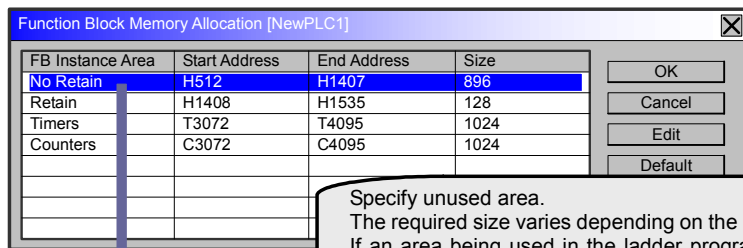

Specify unused area.
The required size varies depending on the used FB and the number of FBs. If an area being used in the ladder program is specified or sufficient free space cannot be found, the CX-Programmer will display a compile error.

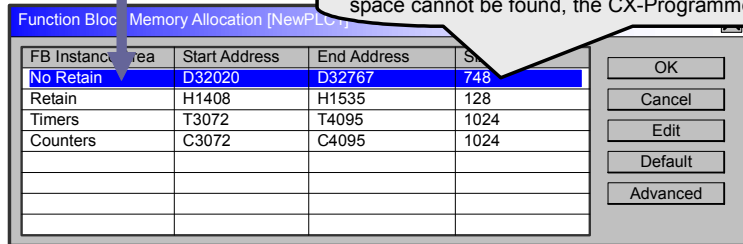

For example, to use the memory area from D32020 to D32767 (748 words), specify the addresses as shown in the left.
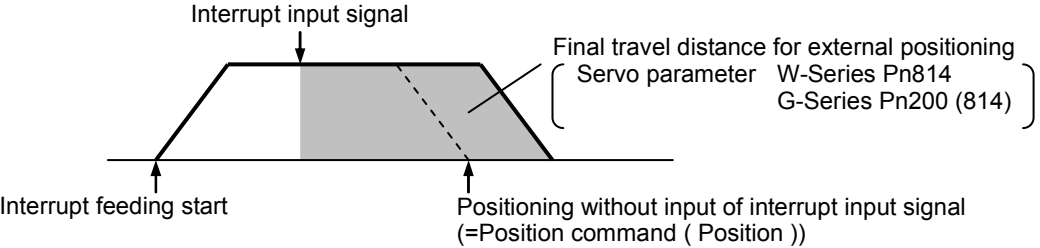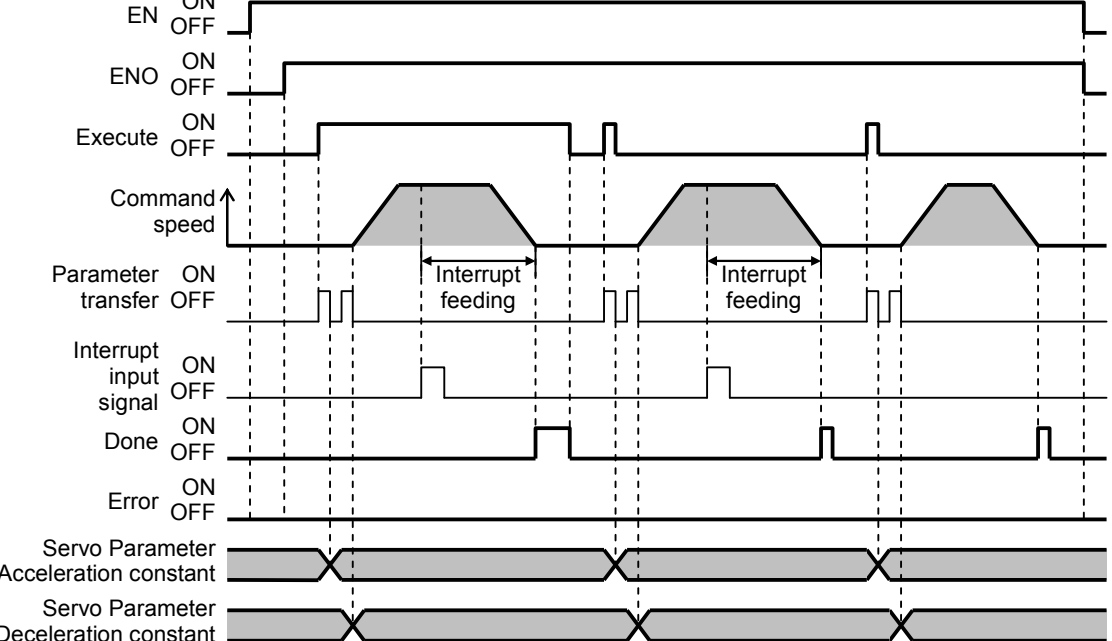
<p>Function description</p>	<p>The acceleration/deceleration time setting is added to the _NCF015_MoveAbsolute3_DINT in this FB. When the Start (Execute) turns ON, the Interrupt Feeding (Move Absolute) for the axis of the specified Unit No. (UnitNo) and Axis No. (Axis) is started using the specified Position command (Position) and Speed command (Velocity). (An Interrupt Feeding Designation Bit of the Axis Operating Output Memory Area is turned ON in the FB, so it does not need to be turned ON at the external ladder program.)</p> <p>When the Start (Execute) turns ON, the value set in Acceleration time (Acceleration) and Deceleration time (Deceleration) is written to "Acceleration constant" and "Deceleration constant" using the Transferring Servo Parameter function. Refer to the <i>Restrictions Other</i> for the details of Servo Parameter "Acceleration constant" and "Deceleration constant".</p> <p>Changing the Speed command (Velocity) during positioning by this FB will change the actual operation speed. Positioning is executed on the axis being positioned for an amount specified in the Servo Parameter, "Final travel distance for external positioning", when the external interrupt input signal is input. When an interrupt input signal is not input, an axis is moved to the position specified in "Position command (Position)".</p>  <p>The Positioning completed (Done) is turned ON when the positioning operation for the FB has been completed. This Flag is also turned ON when the positioning operation is completed without the interrupt feeding signal input. This flag will not be turned ON if the positioning operation is canceled because another operation has been started from a different instance, for a deceleration stop, or because an error has occurred.</p> <p>The Error flag (Error) will be turned ON and the Error code (ErrorID) will be output if an error occurs for the FB. This will not occur for error in other FBs or other instances of the FB.</p> <p>These statuses (Done/CommandAborted/Error/ErrorID) will be reset when the Start (Execute) turns OFF. If the Start (Execute) turns OFF before the positioning operation has been completed, the status will be set for at least one cycle when corresponding conditions have occurred.</p> 
<p>Kind of FB definition</p>	<p>Always execution type. Connect the EN input to the Always ON Flag (P_On). The same instance cannot be used in two or more places.</p>
<p>FB precautions</p>	<ul style="list-style-type: none"> • Executing this FB during the positioning operation will cause a multistart error. • Positioning operation will be performed to the absolute position specified in Position command (Position) from the point at which the last execution was started when executing this FB during the Speed Control or Torque Control. Refer to the <i>Related Manuals</i> for details. • The setting of Axis Parameters and Servo Parameters is required for executing the Interrupt Feeding operation. Refer to 9-5 Interrupt Feeding of the Operation Manual, W426-E1, in the <i>Related Manuals</i> for details.
<p>EN input condition</p>	<ul style="list-style-type: none"> • Connect the EN input to the Always ON Flag (P_On). • If another bit is connected to EN, the FB outputs will be held when the connected bit turns OFF.

**Restrictions
Other**

• The Acceleration/deceleration constants are calculated based on “Speed command (Velocity)” “Acceleration time (Acceleration)” and “Deceleration time (Deceleration)” in this FB. If the calculated value is out of Servo Parameter range, it will be adjusted to be within the range (1 to 65535). In this case, the specified acceleration/deceleration time may be altered.


(Reference) Acceleration/Deceleration constant setting range of Servo Drive

Drive	PRM No.	Parameter name	Size	Unit	Setting range
W-Series	Pn80B	Second-step linear acceleration constant	2	×10000 command units/s ²	1 to 65535
	Pn80E	Second-step linear deceleration constant	2	×10000 command units/s ²	1 to 65535
G-Series	Pn107 (80B)	Linear Acceleration constant	2	×10000 command units/s ²	0 to 65535 (Note)
	Pn10A (80E)	Linear deceleration constant	2	×10000 command units/s ²	0 to 65535 (Note)

(Note) Setting 0 automatically changes to 1.

- The following cannot be specified for this FB: “Acceleration/deceleration curve designation”, “Forward rotation current limit designation” and “Reverse rotation current limit designation”. If these functions are required, specify them in advance outside the FB.
- This FB may act differently according to unit versions of the Position Control Units when executing this FB during the Origin Search operation.

Earlier than 2.0	A Multistart error occurs right after parameters are transferred. Do not execute this FB during the Origin search operation.
2.0 or later	The parameter transferring status is hold until the Origin search is completed. After the completion, the Move Absolute command is executed.

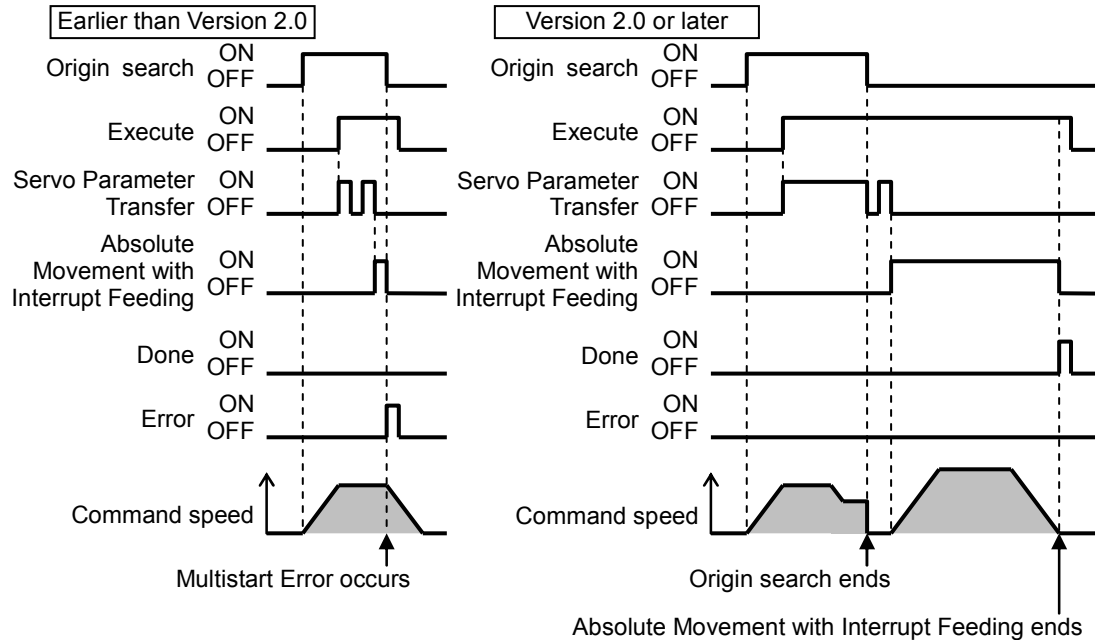

- This FB uses Unit Error Reset, Write Data, Read Data and Save Data Bits of the Position Control Unit (see Note). Therefore, do not turn these bits ON or OFF between the period from the rising edge of EN to the rising edge of ENO. For the same reason, do not use these bits for coil outputs (OUT commands).
- The output variable of FB may not change even if EN is turned ON. In that case, check if any of Unit Error Reset, Write Data, Read Data and Save Data Bit is left ON.
- This FB uses the Absolute Movement and the Interrupt Feeding Bit in the Axis Operating Output Memory Areas. Therefore, do not turn these bits ON or OFF until the operation is completed. For the same reason, do not use these bits for coil outputs (OUT commands).

Note:

For calculation of bit addresses, these bits are referenced in this FB in the first execution of each instance, and when changing "Unit No. (UnitNo)", "Axis No. (Axis)" of the input variable and set "Start (Execute)".

■Variable Tables

Input Variables

Name	Variable name	Data type	Default	Range	Description
EN	EN	BOOL			1 (ON): FB started 0 (OFF): FB not started
Unit No.	UnitNo	INT	&0	&0 to &15	Specify the unit number.
Axis No.	Axis	INT	&1	&1 to &16	Specify the axis number.
Start	Execute	BOOL	0(OFF)		↑ : Starts the absolute move.
Position command	Position	DINT	+0	-2,147,483,648 to +2,147,483,647	Specify the target position. Unit: Command units/s
Speed command	Velocity	DINT	+0	+0 to +2,147,483,647	Specify the target speed. Unit: Command units/s Changing the value while this FB is in operation will change the actual operating speed.
Acceleration time	Acceleration	DINT	+0	+0 to +65,535	Specify the acceleration time for the speed specified in "Speed command (Velocity)". Unit: ms
Deceleration time	Deceleration	DINT	+0	+0 to +65,535	Specify the deceleration time for the speed specified in "Speed command (Velocity)". Unit: ms

Output Variables

Name	Variable name	Data type	Range	Description
ENO	ENO	BOOL		1 (ON): FB operating normally 0 (OFF): FB not operating normally <ul style="list-style-type: none"> • FB not started • Input variable out of the range • FB ended with error • Common Parameters could not be read
Positioning completed	Done	BOOL		Turns ON when the positioning operation has been completed.
Abort	CommandAborted	BOOL		1 (ON): Aborted It will be aborted when any of the following conditions is met during operation <ul style="list-style-type: none"> • Turns ON when the other Move command done (Duplicate Move). • Stopped with Declaration Stop or Emergency Stop. • Executed Servo Unlock, Deviation Counter Reset on an operating axis. • Attempted to execute FB while Servo Unlock, Deceleration Stop, Emergency Stop or Deviation Counter Reset Bit is ON. • Detected the Stop Execution Flag is ON. • The Absolute Movement Bit is changed by the other FB during Absolute Movement in operation.
Error flag	Error	BOOL		Turns ON when an error has occurred in the FB.
Error code	ErrorID	WORD		Returns the error code when an error has occurred in the FB. Refer to the <i>Related Manuals</i> for details on errors. A code of #0000 will be returned if any of the following conditions is satisfied. <ul style="list-style-type: none"> • Input variable is out of range. • The common parameters of the Position Control Units are out of range. • Not established communications with a specified axis. • The Write Servo Parameter Bit is changed by the other FB during writing Servo parameters.

■Version History

Version	Date	Contents
1.01	2007.11.	Original production

■Note

This document explains the function of the function block.

It does not provide information of restrictions on the use of Units and Components or combination of them. For actual applications, make sure to read the operation manuals of the applicable products.