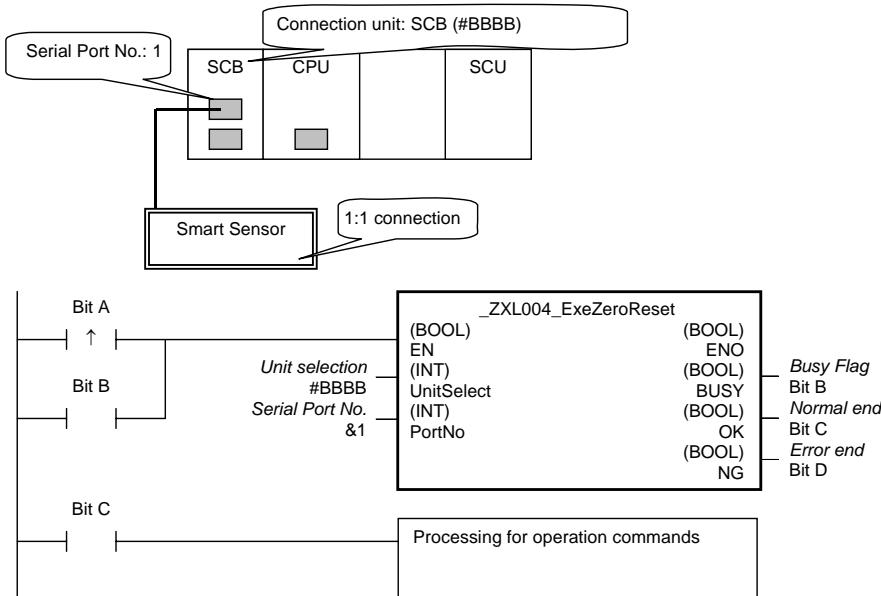


ZXL-004	Execute Zero Reset: _ZXL004_ExecZeroReset	
Basic function	Executes a zero reset for the Smart Sensor.	
Symbol		
File name	Lib\FBL\omronlib\LaserSensor\ZXL_ZXL004_ExecZeroReset10.cxf	
Applicable models	Laser Sensor	ZX-LDA-N
	CPU Unit	CS1*-CPU**H Unit version 3.0 or higher CJ1*-CPU**H Unit version 3.0 or higher CJ1M-CPU** Unit version 3.0 or higher CP1H CP1L (except 10 points CPU)
	Serial Communications Units/Boards	CS1W-SCU21-V1, CJ1W-SCU21-V1, CJ1W-SCU41-V1 Unit Version 1.2 or higher CS1W-SCB21-V1 and CS1W-SCB41-V1 Unit Version 1.2 or higher
	CX-Programmer	Version 5.0 or higher
Conditions for usage	<p>External Connections</p> <ul style="list-style-type: none"> Can be used only for 1:1 connections. (FB "_ZXLN****" can be used for 1:N connections) Communications must be within one network and cannot cross to another network. <p>Communications Settings</p> <p>The communications settings of the serial port must be the same as those of the Laser Sensor.</p> <ul style="list-style-type: none"> The communications settings of the specified serial port can be set to the default Laser Sensor settings using the Set Communications Port (_ZXL600_SetComm) function block, and the other Laser Sensor settings using the Set Serial Gateway Mode (_SCx604_SetPortGATEWAY) function block. <p>CPU Unit Settings</p> <p>PLC Setup: Shared Settings for Communications Instructions in FBs</p> <ul style="list-style-type: none"> Communications Instruction Response Timeout Time (default: 2 s) 5 s recommended Number of retries (default: 0) <p>Shared Resources</p> <ul style="list-style-type: none"> Communications ports (internal logical ports) 	
Function description	When the Start Trigger turns ON, a zero reset is executed for the Smart Sensor connected to the Serial Port specified by the <i>Connection unit</i> and <i>Serial port No.</i>	
FB precautions	<ul style="list-style-type: none"> The FB is processed over multiple cycles. The BUSY output variable can be used to check whether the FB is being processed. OK or NB will be turned ON for one cycle only after processing is completed. Use these flags to detect the end of FB processing. <p>Time Chart</p>	
EN input condition	Connect EN to an OR between an upwardly differentiated condition for the start trigger and the BUSY output from the FB.	
Restrictions Input variables	<ul style="list-style-type: none"> Always use an upwardly differentiated condition for EN. If the input variables are out of range, the ENO Flag will turn OFF and the FB will not be processed. 	
Output variables	<ul style="list-style-type: none"> This FB requires multiple cycles to process. Always connect an OR including the BUSY output variable to the EN input variable to ensure that the FB is processed to completion (see <i>Symbol</i>). Do not turn the BUSY output variable ON or OFF outside the FB. 	

<p>Other</p>	<ul style="list-style-type: none"> • Up to 3 seconds may be required for this FB to be completed (i.e., from EN turning ON until the OK or NG Flag turns ON). • Whether the zero reset value is written to EEPROM is determined by the Zero Reset Memory Setting, just as it is when the zero reset is used for the Smart Sensor. • Set the Zero Reset Memory Setting to OFF. There is a limit on the number of times that the zero reset value can be written by executing a zero reset, just as there is for writing parameters (1 million writes). • An execution error will occur if the Smart Sensor cannot execute the zero reset function, e.g., if the display value is not being held or the detection range would be exceeded. <p>Additional Information: <i>Section 6 Auxiliary Functions in the ZX-L-N Series Smart Sensors Laser Type User's Manual (Z197)</i></p>
<p>Application example</p>	<p>A Smart Sensor is connected 1:1 to serial port 1 on a Serial Communications Board (SCB). When bit A turns ON, a zero reset is performed for the Smart Sensor.</p>  <p>The diagram illustrates the hardware and logic for the zero reset function. It shows a Smart Sensor connected to a Serial Communications Board (SCB) on a CPU. The SCB is connected to a SCU. The Smart Sensor is connected to the SCB via a 1:1 connection. The diagram also shows a ladder logic diagram for the <code>_ZXL004_ExecZeroReset</code> function. Bit A is connected to the EN input, Bit B to the UnitSelect input, and Bit C to the PortNo input. The function outputs Busy Flag, Bit B, Normal end, Bit C, Error end, and Bit D.</p>
<p>Related manuals</p>	<p>ZX-L-N Series Smart Sensors Laser Type User's Manual (Z197) Using the Zero Reset Function in Section 6 AUXILIARY FUNCTIONS ZX Series Smart Sensors Operation Manual (Z157) 3-3-4 Zero Reset Function 4-3-4 Zero Reset Function</p>
<p>Related FBs</p>	<p>Release Zero Reset (<code>_ZXL005_StopZeroReset</code>)</p>

■ Variable Tables

Input Variables

Name	Variable name	Data type	Default	Range	Description
EN	EN	BOOL			1 (ON): FB started. 0 (OFF): FB not started.
Unit selection	UnitSelect	INT	&0	At right.	Specify the Unit and the serial port. Only serial port 2 of CP1H/CP1L M-type CPU unit is possible to use this FB. ■ Connected to CPU Unit Unit selection #FFFF Serial port No. Not accessed. (CP1H/CP1L-M: Serial Port2 CP1L-L14/20: Serial Port1) ■ Connected to Serial Communication Board(SCB) Unit selection #BBBB Serial port No. &1: Serial Port 1 &2: Serial Port 2 ■ Connected to Serial Communication Unit(SCU) Unit selection SCU Unit No. (&0 to &15) Serial port No. &1: Serial Port 1 &2: Serial Port 2
Serial Port No.	PortNo	INT	&1	&1 to &2	

Output Variables

Name	Variable name	Data type	Range	Description
ENO (May be omitted.)	ENO	BOOL		1 (ON): FB processed normally. 0 (OFF): FB not processed or ended in an error.
Busy Flag	BUSY	BOOL		Automatically turns OFF when processing is completed.
Normal end	OK	BOOL		Turns ON for one cycle when processing ends normally.
Error end	NG	BOOL		Turns ON for one cycle when processing ends in an error.

Internal Variables

Internal variables are not output from the FB.

If the NG Flag from the FB turns ON, the following internal variables can be monitored to obtain information on the error.

Name	Variable name	Data type	Range	Description
Error code	ErrorCode	WORD		The results information from the Smart Sensor is output to the Error Code. See below.

Error Code Details

Code	Contents	Meaning
#0000	Normal end	
#2203	Operation error	<ul style="list-style-type: none"> A setting is incorrect. Refer to the <i>Smart Sensor Operation Manual</i> for setting error conditions for teaching and the zero reset function.
#2204	Operation error	<ul style="list-style-type: none"> The Sensor is not in RUN mode.

Version History

Version	Date	Contents
1.00	2004.6.	Original production

Note

This manual is a reference that explains the function block functions.

It does not explain the operational limitations of Units, components, or combinations of Units and components. Always read and understand the Operation Manuals for the system's Units and other components before using them.