


<b>CompoNet -200</b>	<b>Read Generic Status: _CompoNet200_GetGenericStat</b>
--------------------------	---

<b>Basic function</b>	Reads the generic status from slaves connected to CompoNet.	
<b>Symbol</b>		
<b>File name</b>	Lib\FBL\omronlib\Remote IO \CompoNet\ _CompoNet200_GetGenericStat10.cxf	
<b>Applicable models</b>	Applicable Master Units	CS1W-CRM21 and CJ1W-CRM21
	Applicable Slave Units	CRT1-ID16, CRT1-OD16, CRT1-AD04, CRT1-DA02, CRT1B-ID02S, CRT1B-OD02S, CRT1B-ID02SP, CRT1B-OD02SP, CRT1B-ID04SP, CRT1B-MD04SLP and CRS1-RPT01
	CPU Unit	CS1*-CPU**H Unit version 3.0 or higher CJ1*-CPU**H Unit version 3.0 or higher CJ1M-CPU** version 3.0 or higher
	CX-Programmer	Version 5.0 or higher
<b>Conditions for usage</b>	<p>CPU Unit Settings</p> <p>PLC Setup: Shared Settings for Communications Instructions in FBs</p> <ul style="list-style-type: none"> <li>• CompoNet Response Timeout Time (default: 2 s) 10 s recommended</li> <li>• Number of retries (default: 0)</li> </ul> <p>Shared Resources</p> <ul style="list-style-type: none"> <li>• Communication ports (internal logical ports)</li> </ul> <p>Other</p> <ul style="list-style-type: none"> <li>• Communication must be within one network and cannot cross to another network.</li> </ul>	
<b>Function description</b>	<p>The generic status is read from CompoNet slave specified by the Master Unit No., the Slave Node Address and the Slave Type.</p> <p>Refer to the FINS error code and explicit message error code if an error occurs.</p> <p>Both error codes will be output as #0000 for a normal end.</p>	
<b>FB precautions</b>	<ul style="list-style-type: none"> <li>• The FB is processed over multiple cycles. The BUSY output variable can be used to check wheter the FB is being processed.</li> <li>• OK or NG will be turned ON for one cycle only after processing is complete. Use these flags to detect the end of FB processing.</li> </ul> <p>Timechart</p> <p style="text-align: center;">↑ FB execution completed.</p>	
<b>EN input condition</b>	Connect EN to an OR between an upwardly differentiated condition for the start trigger and the BUSY output from the FB.	
<b>Restrictions Input variables</b>	<ul style="list-style-type: none"> <li>• Always use an upwardly differentiated condition for EN.</li> <li>• If the input values are out of range, the ENO Flag will turn OFF and the FB will not be processed.</li> </ul>	
<b>Output variables</b>	<ul style="list-style-type: none"> <li>• This FB requires multiple cycles to process. Always connect an OR including the BUSY output variable to the EN input variable to ensure that FB is processed to completion (see <i>Symbol</i>).</li> <li>• Do not turn the BUSY output variable ON or OFF outside the FB.</li> </ul>	

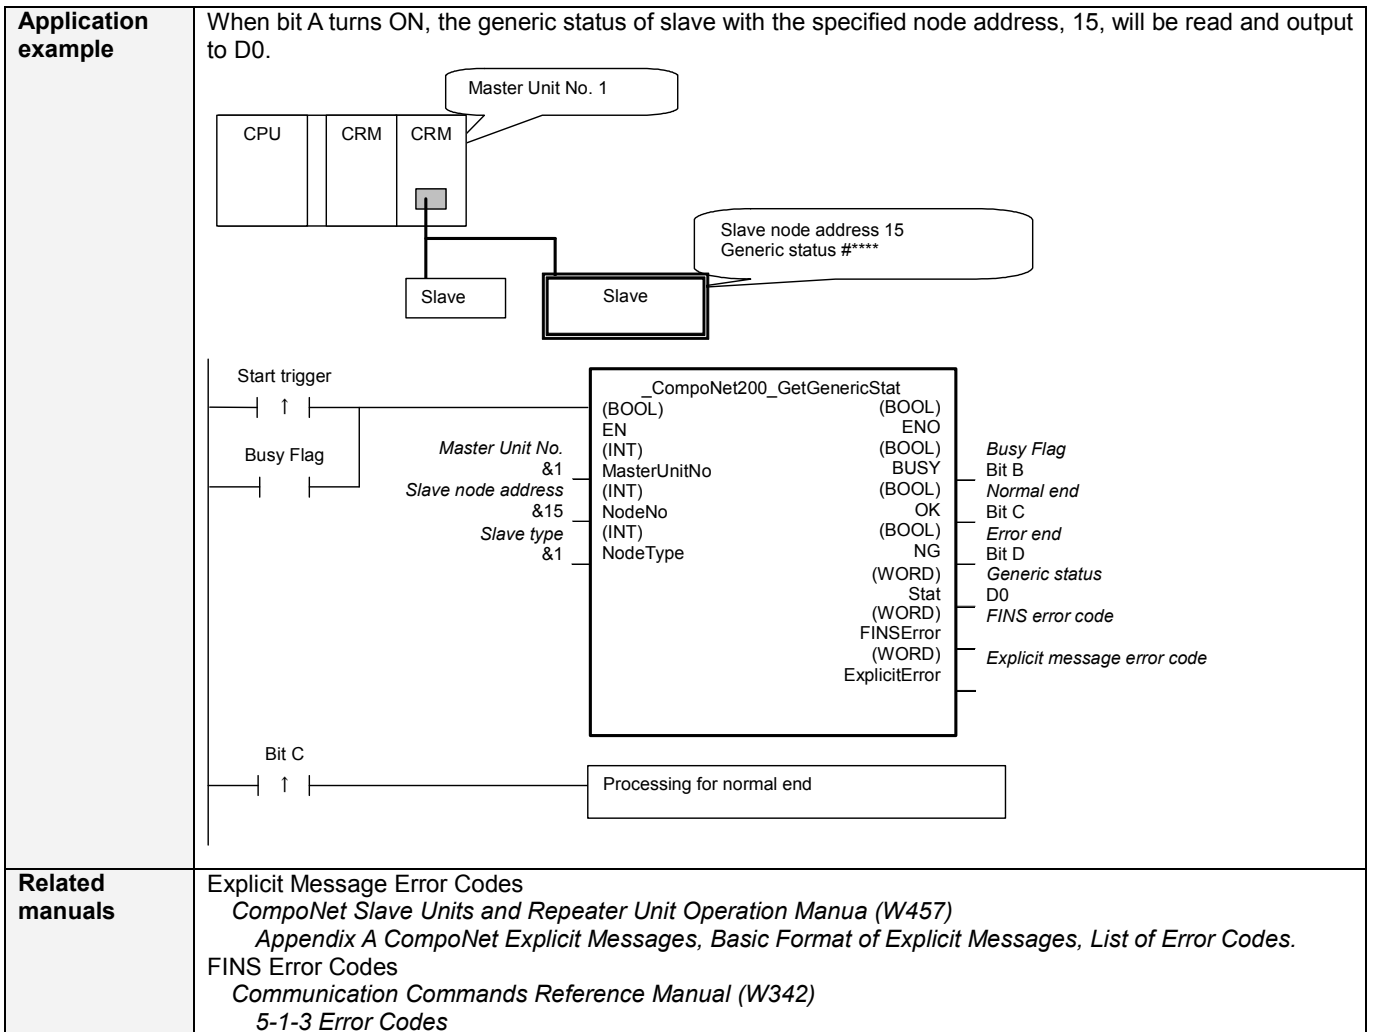

**Variable Tables**

**Input Variables**

Name	Variable name	Data type	Default	Range	Description
EN	EN	BOOL			1 (ON): FB started. 0 (OFF): FB not Started.
Master Unit No.	MasterUnitNo	INT	&0	&0 to &99 &#0 to &#63	Specify the unit number of the CompoNet Master Unit.
Slave node address	NodeNo	INT	&0	&0 to &127	Specify the node address of the slave.
Slave Type	NodeType	INT	&1	&1 to &7	Slave Type 1: Word Slave IN 2: Word Slave OUT 3: Word Slave MIX 4: Bit Slave IN 5: Bit Slave OUT 6: Bit Slave MIX 7: Repeater

**Output Variables**

Name	Variable name	Data type	Range	Description								
ENO (May be omitted)	ENO	BOOL		1 (ON): FB processed normally. 0 (OFF): FB not processed or ended in an error.								
Busy Flag	BUSY	BOOL		Automatically turns OFF when processing is completed.								
Normal end	OK	BOOL		Turns ON for one cycle when processing ends normally.								
Error end	NG	BOOL		Turns ON for one cycle when processing ends in an error.								
Generic status	Stat	WORD		The generic status is output. <table border="1" style="margin-left: 20px;"> <tr> <td style="text-align: center;">d15</td> <td style="text-align: center;">d8</td> <td style="text-align: center;">d7</td> <td style="text-align: center;">d0</td> </tr> <tr> <td colspan="2" style="text-align: center;">Always 0</td> <td colspan="2" style="text-align: center;">Generic status</td> </tr> </table>	d15	d8	d7	d0	Always 0		Generic status	
d15	d8	d7	d0									
Always 0		Generic status										
FINS error code (May be omitted)	FINSError	WORD		The FINS error code is output. A code of #0000 is output for a normal end. Refer to the <i>Related Manuals</i> for details on the error codes.								
Explicit message error code (May be omitted)	ExplicitError	WORD		Output the explicit message error code. A code of #0000 is output for a normal end. Refer to the <i>Related Manuals</i> for details on the error codes.								

**Version History**

Version	Date	Contents
1.00	2006.9	Original production

**Note**

This manual is a reference that explains the function block functions.

It does not explain the operational limitations of Units, components, or combinations of Units and components. Always read and understand the Operation Manuals for the system's Units and other components before using them.