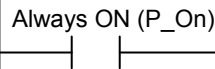
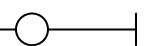


<b>NCF 012B</b>	<b>Move Absolute with Torque-limit (REAL)</b> <b>_NCF012B_MoveAbsolute2_REAL</b>
---------------------	---

<b>Basic function</b>	Executes positioning with the absolute movement during torque control. (Acceleration/Deceleration time setting attachment)																																											
<b>Symbol</b>	<p>Always ON (P_On)</p> 	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; padding: 2px;">_NCF012B_MoveAbsolute2_REAL</td> <td style="width: 50%; padding: 2px;">(BOOL)</td> </tr> <tr> <td style="padding: 2px;">EN</td> <td style="padding: 2px;">ENO</td> </tr> <tr> <td style="padding: 2px;">Unit No.</td> <td style="padding: 2px;">(INT)</td> </tr> <tr> <td style="padding: 2px;">UnitNo</td> <td style="padding: 2px;">(BOOL)</td> </tr> <tr> <td style="padding: 2px;">Axis No.</td> <td style="padding: 2px;">(INT)</td> </tr> <tr> <td style="padding: 2px;">Axis</td> <td style="padding: 2px;">(BOOL)</td> </tr> <tr> <td style="padding: 2px;">Start</td> <td style="padding: 2px;">(BOOL)</td> </tr> <tr> <td style="padding: 2px;">Execute</td> <td style="padding: 2px;">(BOOL)</td> </tr> <tr> <td style="padding: 2px;">Position command</td> <td style="padding: 2px;">(REAL)</td> </tr> <tr> <td style="padding: 2px;">Position</td> <td style="padding: 2px;">(WORD)</td> </tr> <tr> <td style="padding: 2px;">Speed command</td> <td style="padding: 2px;">(REAL)</td> </tr> <tr> <td style="padding: 2px;">Velocity</td> <td style="padding: 2px;">(BOOL)</td> </tr> <tr> <td style="padding: 2px;">Forward torque limit</td> <td style="padding: 2px;">(BOOL)</td> </tr> <tr> <td style="padding: 2px;">ForwardT_LIM</td> <td style="padding: 2px;"></td> </tr> <tr> <td style="padding: 2px;">Reverse torque limit</td> <td style="padding: 2px;">(BOOL)</td> </tr> <tr> <td style="padding: 2px;">ReverseT_LIM</td> <td style="padding: 2px;"></td> </tr> <tr> <td style="padding: 2px;">Acceleration time</td> <td style="padding: 2px;">(REAL)</td> </tr> <tr> <td style="padding: 2px;">Acceleration</td> <td style="padding: 2px;"></td> </tr> <tr> <td style="padding: 2px;">Deceleration time</td> <td style="padding: 2px;">(REAL)</td> </tr> <tr> <td style="padding: 2px;">Deceleration</td> <td style="padding: 2px;"></td> </tr> </table>	_NCF012B_MoveAbsolute2_REAL	(BOOL)	EN	ENO	Unit No.	(INT)	UnitNo	(BOOL)	Axis No.	(INT)	Axis	(BOOL)	Start	(BOOL)	Execute	(BOOL)	Position command	(REAL)	Position	(WORD)	Speed command	(REAL)	Velocity	(BOOL)	Forward torque limit	(BOOL)	ForwardT_LIM		Reverse torque limit	(BOOL)	ReverseT_LIM		Acceleration time	(REAL)	Acceleration		Deceleration time	(REAL)	Deceleration			<p>Positioning completed</p> <p>Abort</p> <p>Error flag</p> <p>Error code</p> <p>Torque limit</p>
_NCF012B_MoveAbsolute2_REAL	(BOOL)																																											
EN	ENO																																											
Unit No.	(INT)																																											
UnitNo	(BOOL)																																											
Axis No.	(INT)																																											
Axis	(BOOL)																																											
Start	(BOOL)																																											
Execute	(BOOL)																																											
Position command	(REAL)																																											
Position	(WORD)																																											
Speed command	(REAL)																																											
Velocity	(BOOL)																																											
Forward torque limit	(BOOL)																																											
ForwardT_LIM																																												
Reverse torque limit	(BOOL)																																											
ReverseT_LIM																																												
Acceleration time	(REAL)																																											
Acceleration																																												
Deceleration time	(REAL)																																											
Deceleration																																												

<b>File name</b>	Lib\FBL\omronlib\PositionController\NCF\_NCF012B_MoveAbsolute2_REAL10.cxf
------------------	---


<b>Applicable models</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; padding: 2px;">Position Control Unit</td> <td style="padding: 2px;">CJ1W-NCF71, CS1W-NCF71</td> </tr> <tr> <td style="padding: 2px;">CPU Unit</td> <td style="padding: 2px;">CS1*-CPU**H Unit Version 3.0 or later CJ1*-CPU**H Unit Version 3.0 or later CJ1M-CPU** Unit Version 3.0 or later CP1H</td> </tr> <tr> <td style="padding: 2px;">CX-Programmer</td> <td style="padding: 2px;">Version 5.0 or later</td> </tr> </table>	Position Control Unit	CJ1W-NCF71, CS1W-NCF71	CPU Unit	CS1*-CPU**H Unit Version 3.0 or later CJ1*-CPU**H Unit Version 3.0 or later CJ1M-CPU** Unit Version 3.0 or later CP1H	CX-Programmer	Version 5.0 or later
Position Control Unit	CJ1W-NCF71, CS1W-NCF71						
CPU Unit	CS1*-CPU**H Unit Version 3.0 or later CJ1*-CPU**H Unit Version 3.0 or later CJ1M-CPU** Unit Version 3.0 or later CP1H						
CX-Programmer	Version 5.0 or later						

<b>Languages in function block definitions</b>	Ladder programming
--	--------------------


<b>Conditions for usage</b>	<p>The following conditions for usage should be the Position Control Unit version 1.2 or earlier. (It will not be required in the Position Control Unit version 1.3 or later)</p>
-----------------------------	---

■CX-Programmer Setting

The function blocks related to the Position Control Units will not operate if the area H512 or higher (default setting) is specified as the Non Retain Area through the Function block memory allocation. Make sure to change the memory area to unused area (DM or EM, for example) from the CX-Programmer. To change this value, click **PLC/Function Block Memory/Function Block Memory Allocation** from the Menu Bar.

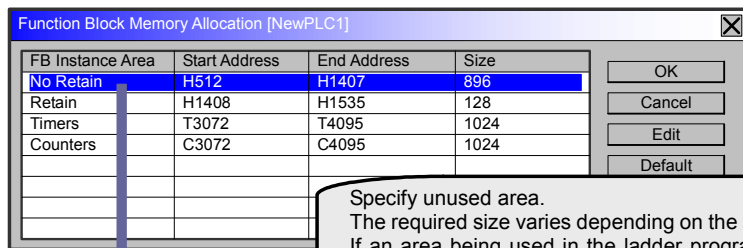

Specify unused area.  
The required size varies depending on the used FB and the number of FBs. If an area being used in the ladder program is specified or sufficient free space cannot be found, the CX-Programmer will display a compile error.

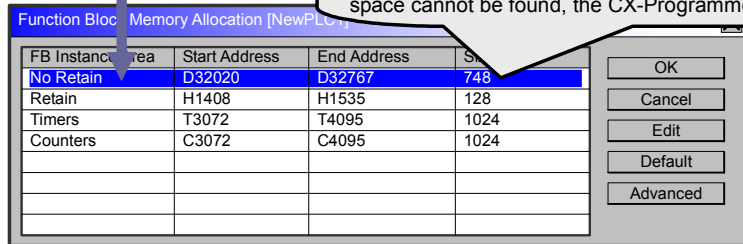

For example, to use the memory area from D32020 to D32767 (748 words), specify the addresses as shown in the left.


<p><b>Function description</b></p>	<p>The acceleration/deceleration time setting is added to the _NCF012_MoveAbsolute2_REAL in this FB. When the Start (Execute) turns ON, a positioning operation for the axis of the specified Unit No. (UnitNo) and Axis No. (Axis) is started using the specified Position command (Position) and Speed command (Velocity), Acceleration time (Acceleration) and Deceleration time (Deceleration).                  When the Start (Execute) turns ON, the value set in Acceleration time (Acceleration) and Deceleration time (Deceleration) is written to "Acceleration constant" and "Deceleration constant" using the Transferring Servo Parameter function. Refer to the <i>Restrictions Other</i> for the details of Servo Parameter "Acceleration constant" and "Deceleration constant".                  Changing the Speed command (Velocity) during positioning by this FB will change the actual operation speed. If Start (Execute) is turned ON with Forward torque limit (ForwardT-LIM) or Reverse torque limit (ReverseT-LIM) set, the torque limit values set in the Servo Parameters (Refer to the <i>Restrictions Other</i>) will be enabled.                  When Start (Execute) is turned ON during axis operation, multistart can be performed. At this time, the setting of Acceleration time (Acceleration) and Deceleration time (Deceleration) is not reflected.                  The Positioning completed (Done) is turned ON when the positioning operation for the FB has been completed. This flag will not be turned ON if the positioning operation is canceled because another operation has been started from a different instance, for a deceleration stop, or because an error has occurred.                  The Error flag (Error) will be turned ON and the Error code (ErrorID) will be output if an error occurs for the FB. This will not occur for error in other FBs or other instances of the FB.                  Torque limit (TorqueLimit) will be turned ON while the output torque is being limited by the torque limits. These statuses (Done/CommandAborted/Error/ErrorID) will be reset when the Start (Execute) turns OFF. If the Start (Execute) turns OFF before the positioning operation has been completed, the status will be set for at least one cycle when corresponding conditions have occurred.</p>
<p><b>Kind of FB definition</b></p>	<p>Always execution type.                  Connect the EN input to the Always ON Flag (P_On).                  The same instance cannot be used in two or more places.</p>
<p><b>FB precautions</b></p>	<ul style="list-style-type: none"> <li>Executing this FB during the positioning operation will cause a duplicate start. Positioning operation will be performed to the absolute position specified in Position command (Position) from the point at which the last execution was started. Refer to the <i>Related Manuals</i> for details.</li> </ul>
<p><b>EN input condition</b></p>	<ul style="list-style-type: none"> <li>Connect the EN input to the Always ON Flag (P_On).                  If another bit is connected to EN, the FB outputs will be held when the connected bit turns OFF.</li> </ul>

**Restrictions  
Other**

• The torque command value at torque limit can be set with the following Servo Parameters. Setting of “Torque limit selections” is required to use G-Series Servo Drives. Torque limit functions do not operate if the setting is incorrect.

Drive	PRM No.	Parameter name	Size	Unit	Setting range	Set value
W-Series	Pn404	Forward rotation external current limit	2	%	0 to 800	Arbitrary value
	Pn405	Reverse rotation external current limit	2	%	0 to 800	Arbitrary value
G-Series	Pn003	Torque limit selection	2	%	1 to 5	3: Switch limit by input signals
	Pn05F	No.2 torque limit	2	%	0 to 500	Arbitrary value

• A multiple start cannot be performed by the same instance until the Positioning command is accepted by the Position Control Unit. Turning ON “Start (Execute)” will be ignored.

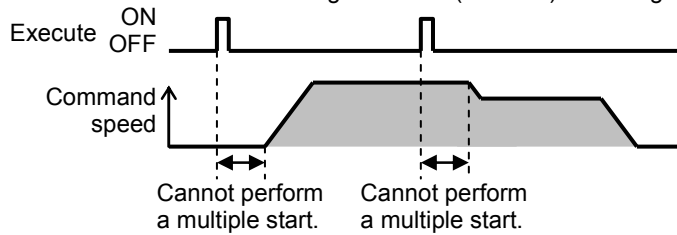

• Changing the Speed command (Velocity) during positioning by this FB will change the actual operation speed. However, the speed will not be changed if the Speed command (Velocity) is less than -2.147483e+009 or exceeds +2.147483e+009.

Ex.1) When changing the Speed command value +1000.0(+1000) to +2.147483e+009 during the operation: The speed command value for the Position Control Unit is changed to +2.147483e+009(+2147483000). Some Position Control Units may cause an error.

Ex.2) When changing the Speed command value +1000.0(+1000) to +2.147484e+009 during the operation: The Speed command value for the Position Control Unit remains +1000.0(+1000) without any change.

• The Acceleration/deceleration constants are calculated based on “Speed command (Velocity)” “Acceleration time (Acceleration)” and “Deceleration time (Deceleration)” in this FB. If the calculated value is out of Servo Parameter range, it will be adjusted to be within the range (1 to 65535). In this case, the specified acceleration/deceleration time may be altered.


(Reference) Acceleration/Deceleration constant setting range of Servo Drive

Drive	PRM No.	Parameter name	Size	Unit	Setting range
W-Series	Pn80B	Second-step linear acceleration constant	2	×10000 command units/s <sup>2</sup>	1 to 65535
	Pn80E	Second-step linear deceleration constant	2	×10000 command units/s <sup>2</sup>	1 to 65535
G-Series	Pn107 (80B)	Linear Acceleration constant	2	×10000 command units/s <sup>2</sup>	0 to 65535 (Note)
	Pn10A (80E)	Linear deceleration constant	2	×10000 command units/s <sup>2</sup>	0 to 65535 (Note)

(Note) Setting 0 automatically changes to 1.

• The following cannot be specified for this FB: "Acceleration/deceleration curve designation". If this function is required, specify them in advance outside the FB.  
 This FB may act differently according to unit versions of the Position Control Units when executing this FB during the Origin Search operation.

Earlier than 2.0	A Multistart error occurs right after parameters are transferred. Do not execute this FB during the Origin search operation.
2.0 or later	The parameter transferring status is hold until the Origin search is completed. After the completion, the Move Absolute command is executed.

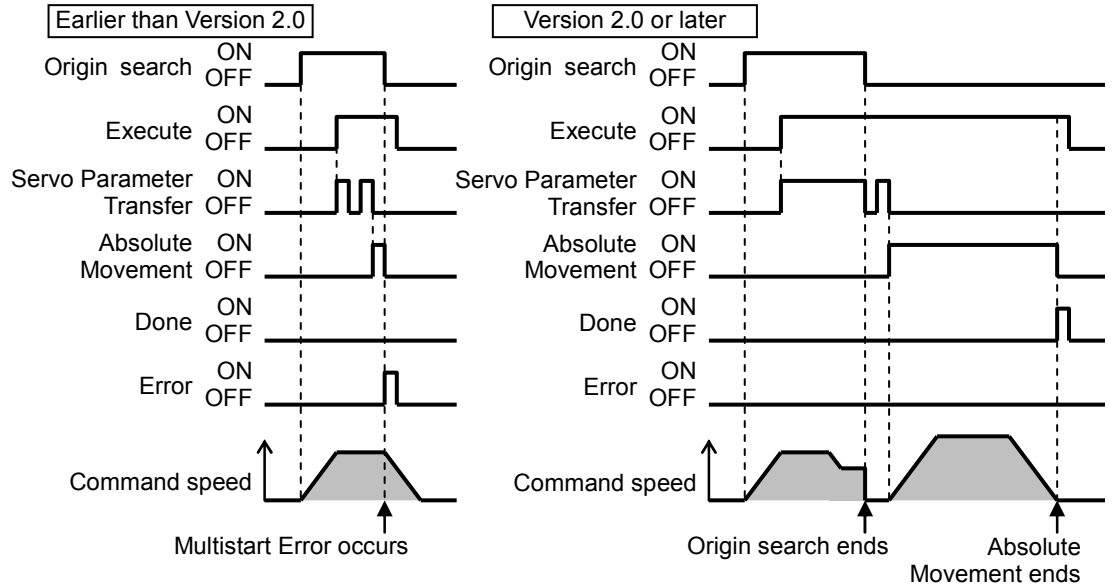

- This FB uses Unit Error Reset, Write Data, Read Data and Save Data Bits of the Position Control Unit (see Note). Therefore, do not turn these bits ON or OFF between the period from the rising edge of EN to the rising edge of ENO. For the same reason, do not use these bits for coil outputs (OUT commands).
- The output variable of FB may not change even if EN is turned ON. In that case, check if any of Unit Error Reset, Write Data, Read Data and Save Data Bit is left ON.
- This FB uses the Absolute Movement, Forward rotation current limit designation and Reverse rotation current limit designation Bit in the Axis Operating Output Memory Areas. Therefore, do not turn these bits ON or OFF until the operation is completed. For the same reason, do not use these bits for coil outputs (OUT commands).
- Starting this FB while the Interrupt Feeding Bit of Axis Operating Output Memory Areas is ON will cause an error.

Note:

For calculation of bit addresses, these bits are referenced in this FB in the first execution of each instance, and when changing "Unit No. (UnitNo)", "A xis No. (Axis)" of the input variable and set "Start (Execute)".

**Application example**

Turning the Start Trigger ON from OFF will operate the Servomotor (axis1) connected to the Position Control Unit with a unit number 0 using the Move Absolute command.

Sample	
<b>_NCF012B_MoveAbsolute2_REAL</b>	
(BOOL) EN	(BOOL) ENO
(INT) Unit No. &0	(BOOL) Positioning completed Bit B
(INT) Axis No. &1	(BOOL) Abort Bit C
(BOOL) Start Bit A	(BOOL) Error flag Bit D
(REAL) Position command +2000.0	(WORD) Error code D0
(REAL) Speed command +2000.0	(BOOL) Torque limit Bit G
(BOOL) Forward torque limit Bit E	
(BOOL) Reverse torque limit Bit F	
(REAL) Acceleration time +200.0	
(REAL) Deceleration time +200.0	

**Related manuals**

Position Control Units OPERATION MANUAL (W426-E1)  
 5-3 Transferring Servo Parameters  
 SECTION 9 Positioning  
 10-4 Torque Limits  
 12-4 Error Codes

■Variable Tables

Input Variables

Name	Variable name	Data type	Default	Range	Description
EN	EN	BOOL			1 (ON): FB started 0 (OFF): FB not started
Unit No.	UnitNo	INT	&0	&0 to &15	Specify the unit number.
Axis No.	Axis	INT	&1	&1 to &16	Specify the axis number.
Start	Execute	BOOL	0(OFF)		↑: Starts the absolute move.
Position command	Position	REAL	+0.0	-2.147483e+009 to +2.147483e+009	Specify the target position. Unit: Command units/s
Speed command	Velocity	REAL	+0.0	+0.0 to +2.147483e+009	Specify the target speed. Unit: Command units/s Changing the value while this FB is in operation will change the actual operating speed.
Forward torque limit	ForwardT_LIM	BOOL	0(OFF)		Specify the torque limit in forward direction.
Reverse torque limit	ReverseT_LIM	BOOL	0(OFF)		Specify the torque limit in reverse direction.
Acceleration time	Acceleration	REAL	+0.0	+0.0 to +65535.0	Specify the acceleration time for the speed specified in "Speed command (Velocity)". Unit: ms
Deceleration time	Deceleration	REAL	+0.0	+0.0 to +65535.0	Specify the deceleration time for the speed specified in "Speed command (Velocity)". Unit: ms

**Output Variables**

Name	Variable name	Data type	Range	Description
ENO	ENO	BOOL		1 (ON): FB operating normally 0 (OFF): FB not operating normally <ul style="list-style-type: none"> <li>•FB not started</li> <li>•Input variable out of the range</li> <li>•FB ended with error</li> <li>•Common Parameters could not be read</li> </ul>
Positioning completed	Done	BOOL		Turns ON when the positioning operation has been completed.
Abort	CommandAborted	BOOL		1 (ON): Aborted It will be aborted when any of the following conditions is met during operation <ul style="list-style-type: none"> <li>•Turns ON when the other Move command done (Duplicate Move).</li> <li>•Stopped with Declaration Stop or Emergency Stop.</li> <li>•Executed Servo Unlock, Deviation Counter Reset on an operating axis.</li> <li>•Attempted to execute FB while Servo Unlock, Deceleration Stop, Emergency Stop or Deviation Counter Reset Bit is ON.</li> <li>•Detected the Stop Execution Flag is ON.</li> <li>•The Absolute Movement Bit is changed by the other FB during Absolute Movement in operation.</li> </ul>
Error flag	Error	BOOL		Turns ON when an error has occurred in the FB.
Error code	ErrorID	WORD		Returns the error code when an error has occurred in the FB. Refer to the <i>Related Manuals</i> for details on errors. A code of #0000 will be returned if any of the following conditions is satisfied. <ul style="list-style-type: none"> <li>•Input variable is out of range.</li> <li>•The common parameters of the Position Control Units are out of range.</li> <li>•Not established communications with a specified axis.</li> <li>•The Interrupt Feeding Bit of Axis Operating Output Memory Areas is ON before Absolute Movement is executed by this FB.</li> <li>•The Write Servo Parameter Bit is changed by the other FB during writing Servo parameters.</li> </ul>
Torque limit	TorqueLimit	BOOL		1 (ON) indicates that output torque is being limited.

**■Version History**

Version	Date	Contents
1.00	2007.11.	Original production

**■Note**

This document explains the function of the function block.

It does not provide information of restrictions on the use of Units and Components or combination of them. For actual applications, make sure to read the operation manuals of the applicable products.