
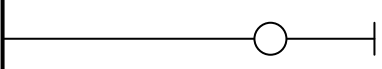
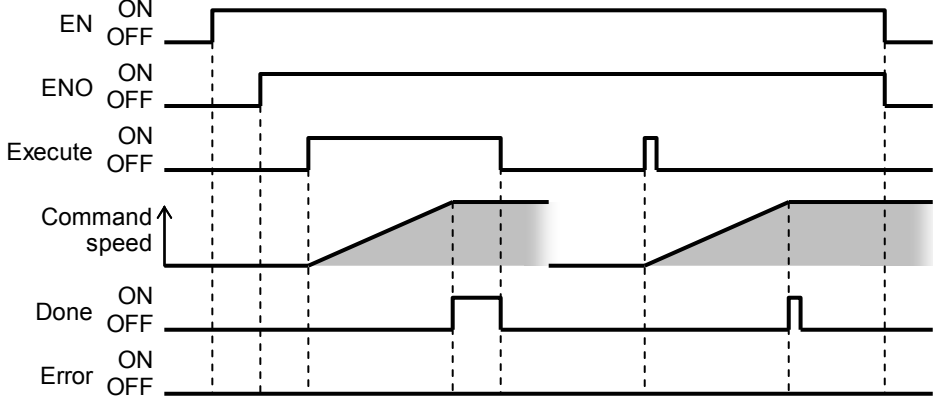


NCF031	Speed Control (DINT) _NCF031_MoveVelocity_DINT
---------------	---

Basic function	Controls the speed.																																								
Symbol	<div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>Always ON (P_On)</p> <p>Unit No.</p> <p>Axis No.</p> <p>Start</p> <p>Speed command</p> </div> <div style="flex: 2; border: 1px solid black; padding: 5px; margin: 0 10px;"> <table style="width:100%; border-collapse: collapse;"> <tr> <td style="width:50%; padding: 2px;">_NCF031_MoveVelocity_DINT</td> <td style="width:50%; padding: 2px;"></td> </tr> <tr> <td style="padding: 2px;">(BOOL) EN</td> <td style="padding: 2px;">(BOOL) ENO</td> </tr> <tr> <td style="padding: 2px;">(INT) UnitNo</td> <td style="padding: 2px;">(BOOL) Done</td> </tr> <tr> <td style="padding: 2px;">(INT) Axis</td> <td style="padding: 2px;">(BOOL) CommandAborted</td> </tr> <tr> <td style="padding: 2px;">(BOOL) Execute</td> <td style="padding: 2px;">(BOOL) Error</td> </tr> <tr> <td style="padding: 2px;">(DINT) Velocity</td> <td style="padding: 2px;">(WORD) ErrorID</td> </tr> </table> </div> <div style="flex: 1; text-align: right; padding-right: 10px;">  <p>Speed reached flag</p> <p>Abort</p> <p>Error flag</p> <p>Error code</p> </div> </div>	_NCF031_MoveVelocity_DINT		(BOOL) EN	(BOOL) ENO	(INT) UnitNo	(BOOL) Done	(INT) Axis	(BOOL) CommandAborted	(BOOL) Execute	(BOOL) Error	(DINT) Velocity	(WORD) ErrorID																												
_NCF031_MoveVelocity_DINT																																									
(BOOL) EN	(BOOL) ENO																																								
(INT) UnitNo	(BOOL) Done																																								
(INT) Axis	(BOOL) CommandAborted																																								
(BOOL) Execute	(BOOL) Error																																								
(DINT) Velocity	(WORD) ErrorID																																								
File name	Lib\FBL\omronlib\PositionController\NCF_NCF031_MoveVelocity_DINT11.cxf																																								
Applicable models	<table style="width:100%; border-collapse: collapse;"> <tr> <td style="width:20%; padding: 2px;">Position Unit</td> <td style="padding: 2px;">CJ1W-NCF71, CS1W-NCF71</td> </tr> <tr> <td style="padding: 2px;">CPU Unit</td> <td style="padding: 2px;">CS1*-CPU**H Unit Version 3.0 or later CJ1*-CPU**H Unit Version 3.0 or later CJ1M-CPU** Unit Version 3.0 or later CP1H</td> </tr> <tr> <td style="padding: 2px;">CX-Programmer</td> <td style="padding: 2px;">Version 5.0 or later</td> </tr> </table>	Position Unit	CJ1W-NCF71, CS1W-NCF71	CPU Unit	CS1*-CPU**H Unit Version 3.0 or later CJ1*-CPU**H Unit Version 3.0 or later CJ1M-CPU** Unit Version 3.0 or later CP1H	CX-Programmer	Version 5.0 or later																																		
Position Unit	CJ1W-NCF71, CS1W-NCF71																																								
CPU Unit	CS1*-CPU**H Unit Version 3.0 or later CJ1*-CPU**H Unit Version 3.0 or later CJ1M-CPU** Unit Version 3.0 or later CP1H																																								
CX-Programmer	Version 5.0 or later																																								
Languages in function block definitions	Ladder programming																																								
Conditions for usage	<p>The following conditions for usage should be the Position Control Unit version 1.2 or earlier. (It will not be required in the Position Control Unit version 1.3 or later)</p> <p>■CX-Programmer Setting</p> <p>The function blocks related to the Position Control Units will not operate if the area H512 or higher (default setting) is specified as the Non Retain Area through the Function block memory allocation. Make sure to change the memory area to unused area (DM or EM, for example) from the CX-Programmer. To change this value, click PLC/Function Block Memory/Function Block Memory Allocation from the Menu Bar.</p> <div style="border: 1px solid gray; padding: 5px; margin: 10px 0;"> <table style="width:100%; border-collapse: collapse; font-size: 8px;"> <thead> <tr> <th style="text-align: left;">FB Instance Area</th> <th style="text-align: left;">Start Address</th> <th style="text-align: left;">End Address</th> <th style="text-align: left;">Size</th> </tr> </thead> <tbody> <tr> <td>No Retain</td> <td>H512</td> <td>H1407</td> <td>896</td> </tr> <tr> <td>Retain</td> <td>H1408</td> <td>H1535</td> <td>128</td> </tr> <tr> <td>Timers</td> <td>T3072</td> <td>T4095</td> <td>1024</td> </tr> <tr> <td>Counters</td> <td>C3072</td> <td>C4095</td> <td>1024</td> </tr> </tbody> </table> </div> <div style="border: 1px solid gray; padding: 5px; margin: 10px 0;"> <table style="width:100%; border-collapse: collapse; font-size: 8px;"> <thead> <tr> <th style="text-align: left;">FB Instance Area</th> <th style="text-align: left;">Start Address</th> <th style="text-align: left;">End Address</th> <th style="text-align: left;">Size</th> </tr> </thead> <tbody> <tr> <td>No Retain</td> <td>D32020</td> <td>D32767</td> <td>748</td> </tr> <tr> <td>Retain</td> <td>H1408</td> <td>H1535</td> <td>128</td> </tr> <tr> <td>Timers</td> <td>T3072</td> <td>T4095</td> <td>1024</td> </tr> <tr> <td>Counters</td> <td>C3072</td> <td>C4095</td> <td>1024</td> </tr> </tbody> </table> </div> <div style="border: 1px solid gray; padding: 5px; margin: 10px 0; font-size: 10px;"> <p>Specify unused area. The required size varies depending on the used FB and the number of FBs. If an area being used in the ladder program is specified or sufficient free space cannot be found, the CX-Programmer will display a compile error.</p> </div> <div style="font-size: 10px; margin-top: 10px;"> <p>For example, to use the memory area from D32020 to D32767 (748 words), specify the addresses as shown in the left.</p> </div>	FB Instance Area	Start Address	End Address	Size	No Retain	H512	H1407	896	Retain	H1408	H1535	128	Timers	T3072	T4095	1024	Counters	C3072	C4095	1024	FB Instance Area	Start Address	End Address	Size	No Retain	D32020	D32767	748	Retain	H1408	H1535	128	Timers	T3072	T4095	1024	Counters	C3072	C4095	1024
FB Instance Area	Start Address	End Address	Size																																						
No Retain	H512	H1407	896																																						
Retain	H1408	H1535	128																																						
Timers	T3072	T4095	1024																																						
Counters	C3072	C4095	1024																																						
FB Instance Area	Start Address	End Address	Size																																						
No Retain	D32020	D32767	748																																						
Retain	H1408	H1535	128																																						
Timers	T3072	T4095	1024																																						
Counters	C3072	C4095	1024																																						

<p>Function description</p>	<p>When the Start (Execute) turns ON, the Speed Control for the axis of the specified Unit No. (UnitNo) and Axis No. (Axis) is started using the specified Speed command (Velocity). Changing the value of Speed command (Velocity) during the speed control by this FB will change the actual operation speed. The value of Speed command (Velocity) can be reflected while the Start (Execute) is turned ON even after the speed has been reached. The Speed reached flag (Done) is turned ON when the target speed specified in the FB has been reached. The Error flag (Error) will be turned ON and the Error code (ErrorID) will be output if an error occurs for the FB. This will not occur for error in other FBs or other instances of the FB. These statuses (Done/CommandAborted/Error/ErrorID) will be reset then the Start (Execute) turns OFF. If the Start (Execute) turns OFF before the positioning operation has been completed, the status will be set for at least one cycle when supporting conditions have occurred.</p> 
<p>Kind of FB definition</p>	<p>Always execution type. Connect the EN input to the Always ON Flag (P_On). The same instance cannot be used in two or more places.</p>
<p>FB precautions</p>	<ul style="list-style-type: none"> Turning ON the Start (Execute) again after the speed has been reached will cause a multiple start and the speed will be changed to the value set in Speed command (Velocity) then. Refer to the Related Manuals for details.
<p>EN input condition</p>	<ul style="list-style-type: none"> Connect the EN input to the Always ON Flag (P_On). If another bit is connected to EN, the FB outputs will be held when the connected bit turns OFF.
<p>Restrictions Other</p>	<ul style="list-style-type: none"> The value of Speed command (Velocity) can be reflected while the Start (Execute) is turned ON even after the speed has been reached. At that time, if more than one instance is executed, they will be operated with the command value of instance located in the bottom. The following cannot be specified for this FB: "Torque limit/torque feed forward", "Forward rotation current limit designation" and "Reverse rotation current limit designation". If any of these functions is required, specify them in advance outside the FB. (The Option command value error, Error code #3064 and #3065, will occur if "Torque limit/torque feed forward" is out of range.) This FB uses Unit Error Reset, Write Data, Read Data and Save Data Bits of the Position Control Unit (see Note). Therefore, do not turn these bits ON or OFF between the period from the rising edge of EN to the rising edge of ENO. For the same reason, do not use these bits for coil outputs (OUT commands). The output variable of FB may not change even if EN is turned ON. In that case, check if any of Unit Error Reset, Write Data, Read Data and Save Data Bit is left ON. This FB uses the Speed Control Bit in the Axis Operating Output Memory Areas. Therefore, do not turn these bits ON or OFF until the operation is completed. For the same reason, do not use these bits for coil outputs (OUT commands). <p>Note:</p> <ul style="list-style-type: none"> For calculation of bit addresses, these bits are referenced in this FB in the first execution of each instance, and when changing "Unit No. (UnitNo)", "Axis No. (Axis)" of the input variable and set "Start (Execute)".

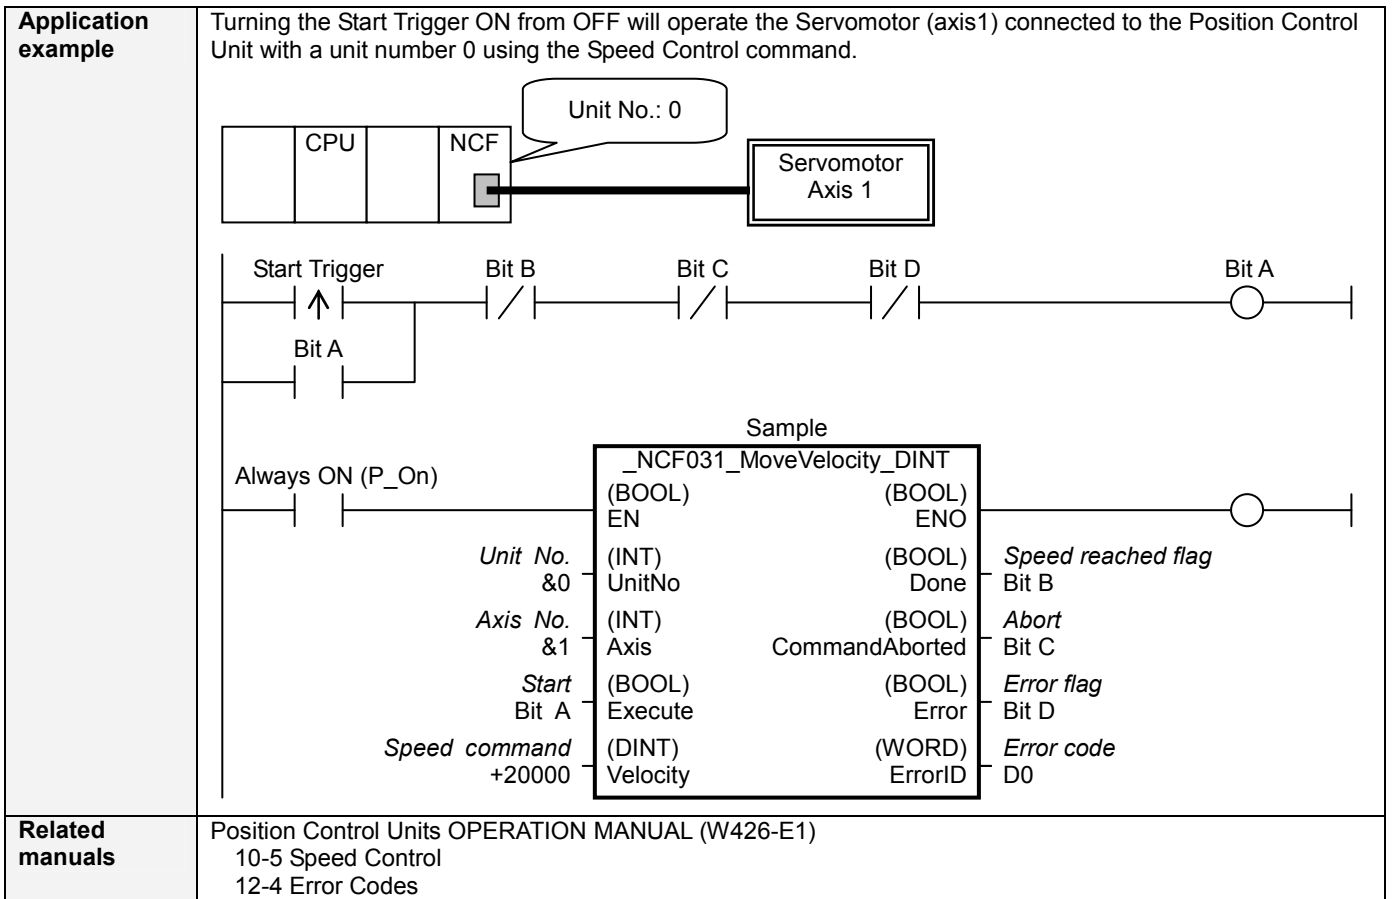

■Variable Tables

Input Variables

Name	Variable name	Data type	Default	Range	Description
EN	EN	BOOL			1 (ON): FB started 0 (OFF): FB not started.
Unit No.	UnitNo	INT	&0	&0 to &15	Specify the unit number.
Axis No.	Axis	INT	&1	&1 to &16	Specify the axis number.
Start	Execute	BOOL	0(OFF)		↑ : Starts the speed control.
Speed command	Velocity	DINT	+0	-199,999 to +199,999	Specify the target speed. The unit is 0.001% of the maximum speed of the motor being used. Changing the value while this FB is in operation will change the actual operating speed.

Output Variables

Name	Variable name	Data type	Range	Description
ENO	ENO	BOOL		1 (ON): FB operating normally 0 (OFF): FB not operating normally •FB not started •Input variable out of the range •FB ended with error •Common Parameters could not be read
Speed reached flag	Done	BOOL		Turns ON when the target speed has been reached.
Abort	CommandAborted	BOOL		1 (ON): Aborted It will be aborted when any of the following conditions is met during operation • Turns ON when the other Move command done (Duplicate Move). • Stopped with Declaration Stop or Emergency Stop. • Executed Servo Unlock, Deviation Counter Reset on an operating axis. • Attempted to execute FB while Servo Unlock, Deceleration Stop, Emergency Stop or Deviation Counter Reset Bit is ON. • Detected the Stop Execution Flag is ON. • The Speed Control Bit is changed by the other FB during Speed Control in operation.
Error flag	Error	BOOL		Turns ON when an error has occurred in the FB.
Error code	ErrorID	WORD		Returns the error code when an error has occurred in the FB. Refer to the <i>Related Manuals</i> for details on errors. A code of #0000 will be returned if any of the following conditions is satisfied. • Input variable is out of range. • The common parameters of the Position Control Units are out of range. • Not established communications with a specified axis.

■Version History

Version	Date	Contents
1.00	2004.06.	Original production
1.10	2005.01.	Limitation about the setting timing with " Unit No. " and " Axis No. " was removed.

■ The detailed contents of the upgrading

Version	Detailed Contents
1.10	In version 1.00, " Unit No. " and " Axis No. " must be set when EN was ON and " Start (Execute) " was OFF. This means not sometimes working normally when " Unit No. " and " Axis No. " are changed simultaneously with ON of " Start (Execute) ". In version 1.10, this limitation was removed.

■Note

This document explains the function of the function block.

It does not provide information of restrictions on the use of Units and Components or combination of them. For actual applications, make sure to read the operation manuals of the applicable products.